



WWW.VEEDUBTRANSPORTERS.CO.UK

T6.1 DARK SMOKED DYNAMIC LED SIDE REPEATERS

-

FITTING GUIDE



REQUIRED TOOLS

-Trim Tool

TIME REQUIRED



~ 10 Minutes

DIFFICULTY



STEP 1


Start off by removing the original Side Repeaters from your van.



STEP 2

Remove the wiring followed by the bulb holder.

This can be done by twisting the holder anti clockwise.

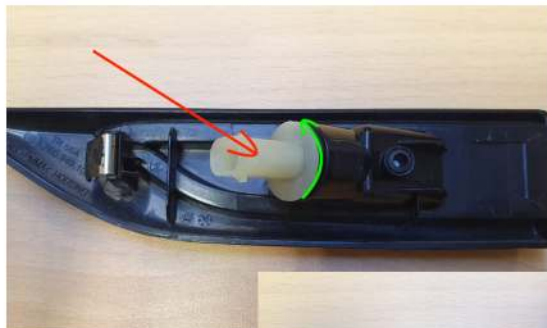

* these bulb holders can be black or white *

STEP 3

Once removed, continue to remove the bulb from the holder, and set the holder aside.



STEP 4

Insert the spade fitting of the new Side Repeater into the bulb holder and re fit it.



STEP 5

Link the new Side Repeaters to your van and ensure that the connector clicks into place.



STEP 6

Insert the Side Repeater into the located hole on the van.



STEP 7

Finally carefully press the Side Repeater into place until it clicks securely.



STEP 8

Repeat this process for the opposite side.

